

## Automatic Universal Lithium Ion Video/Camcorder/Digital Camera PLUS AA/AAA NiCd/NiMH Battery Charger with LCD display

- This universal battery charger comes attractively packaged in a clam shell than can be hung or free standing. The unit has a built in base plate & includes additional adaptor plates that will fit the majority of major brand lithium ion battery packs for Video/Camcorder/Digital Cameras.
- Adaptor Plate now included for charging 1 to 4 AA or AAA size NiCd or NiMH batteries.
- Charging time standard batteries will take around an hour to charge & high capacity batteries from 2-6 hours dependent on the battery capacity.
- Features LCD charge indicator display.

Input: 12VDC via car cigarette lighter plug or 100-240VAC power supply included. Output: auto voltage detect 8.4VA. SAA, GS, UL, CE approved.

The standard package includes the CX1500 charger, world voltage 100V-240V switch mode AC/DC adapter, cigarette lighter plug cord, battery adaptor plates, user manual.



Sydney 33-39 Sloane St Marrickville NSW 2204

Phone (02) 95191200 Fax (02) 95194604 Email sales@master-instruments.com.au Melbourne Unit 13 107 Heatherdale Rd Ringwood VIC 3134 Phone (03) 98726422 Fax (03) 98726466 Email vic@master-instruments.com.au

Available from

## UNIVERSAL LI-ION BATTERY CHARGER COMPATIBILITY CHART

BRAND	BATTERY	CHARGE BY	BRAND	BATTERY	CHARGE BY	BRAND	BATTERY	CHARGE BY
CANON®	BP-2L12 BP-2LH BP-3LCL BP-406/412/422 BP-407 BP-511/512/522/535 BP-608/617 BP-911/914/915/941 BP-924/927/930/945 NB-1L NB-1LH	Universal Plate Adapter Plate A Universal Plate Adapter Plate D Adapter Plate C Base Unit Adapter Plate A Base Unit Base Unit Adapter Plate C Universal Plate Adapter Plate C Universal Plate	PANASONIC®	AG-BP15P/BP25 CGA-DU07/14/21 CGA-S001E/S002 CGA-S003A/1B CGA-S004/S005 CGA-S006E CGA-S301/S302A CGP-110E/120E CGP-145/165/285 CGP-D14/16/21/28 CGR-101 CGR-602A/602E CGR-B202A	Base Unit Universal Plate Universal Plate Universal Plate Universal Plate Universal Plate Adapter Plate B Adapter Plate B Adapter Plate B Universal Plate Universal Plate Base Unit	SHARP® SONY®	AD-S30BT/S31BT AD-T50BT/T51BT BT-L1/L2 BT-L11/L12/L22 BT-L221/L441/L241/L41 BT-L31 VR-BL71 VR-BL72 VR-BL75 VR-BL81 VR-BL81 VR-BL91	Universal Plate Universal Plate Adapter Plate A Adapter Plate A Adapter Plate B Adapter Plate C Adapter Plate C Adapter Plate C Adapter Plate A Adapter Plate B Universal Plate
	NB2F12/NB-2LH NB-2L NB-3L	Universal Plate Adapter Plate A Universal Plate Universal Plate		CGR-D08A CGR-D105 CGR-D110 CGR-D120	Adapter Plate B Adapter Plate B Adapter Plate B Adapter Plate B Universal Plate		LIP-4WM NP-500/520 NP-F10/F20/F30 NP-F100/F200/F300 NP-F330/F530	Universal Plate Base Unit Base Unit Base Unit Base Unit
CASIO®	NB-4L NP-20/30/40	Universal Plate Universal Plate		CGR-D16A CGR-D210/D320	Adapter Plate B Adapter Plate B		NP-F550 NP-F720/F730	Base Unit Base Unit
FUJI®	DR-LB4 NP-30/40/60/100/120 NP-80	Universal Plate		CGR-D220 CGR-D28A/D53A CGR-S101A/S602A CGR-S602E	Adapter Plate B Universal Plate Adapter Plate B Universal Plate Adapter Plate B Universal Plate		NP-F730H NP-F750/F750SP NP-F930 NP-F950/F960 NP-FC10/FC11 NP-FE1	Base Unit Base Unit Base Unit Base Unit Base Unit Universal Plate
HATICHI®	VM-BPL13/27/30/60 VM-E330/535 VM-N520/NP500	Base Unit Base Unit Base Unit	- - - - - -	CGR-V14/26 CGR-V610/620E DMW-BC7 DMW-BCA7	Adapter Plate C Adapter Plate C Universal Plate Universal Plate		NP-FF50/70 NP-FM50/70/90 NP-FP50/70/90 NP-FR1	Base Unit Base Unit Base Unit Universal Plate
JVC®	BN-507/514 BN-V101 BN-V107/V114 BN-V214/207 BN-V306/V37U BN-V312/V312U BN-V408/416/428 BN-V607/ 615/628 BN-V712/714 BN-V812/814 BN-V907 BN-VF707/VF714 BN-VF733 J-I723	Adapter Plate C Universal Plate Adapter Plate D Adapter Plate C Universal Plate Base Unit Adapter Plate B Adapter Plate A Base Unit Adapter Plate B Universal Plate Universal Plate Adapter Plate B		DMW-BCB7 DMW-BCC12 DMW-BL14 DMW-BM7 PV-DBP5 VW-VBA05/10 VW-VBAP10 VW-VBD07 VW-VBD07 VW-VBD1 / E VW-VBD14 VW-VBD2 VW-VBD21 VW-VBD23/24	Universal Plate Universal Plate Universal Plate Base Unit Universal Plate Universal Plate Universal Plate Base Unit Universal Plate Base Unit Adapter Plate B Universal Plate Adapter Plate B	THOMSON <sup>®</sup> TOSHIBA <sup>®</sup>	NP-FS11/21/31 NP-FT1 NP-QM51/71/91 BAT600 PDR-BT1/BT2 PDR-BT3/BT9	Base Unit Base Unit Base Unit Adapter Plate A Universal Plate Universal Plate
KODAK®	KLIC-3000	Adapter Plate A		VW-VBP10	Universal Plate			
	KLIC-5000/5001	Universal Plate Universal Plate	PENTAX®	D-L12/17/18	Universal Plate			
KONICA MINOLTA®	DR-LB1/LB4 NP-1L NP-200/400/600/700 NP-800	Universal Plate Universal Plate Universal Plate Adapter Plate C	POLAROID <sup>®</sup> RCA <sup>®</sup>	PR-105DG PR-110DG/111DG BB-065L BB-075/075L	Universal Plate Universal Plate Base Unit Adapter Plate A			
	NP-900	Universal Plate Universal Plate	RICOH®	DB-30/40/43/60 NP-40	Universal Plate Universal Plate			
KYOCERA®	BP-800S/1000S	Universal Plate	SAMSUNG®	SB-L160/L320/L480	Base Unit			
NIKON <sup>®</sup>	EN-EL1 EN-EL2 /EL3/EL5 EN-EL8	Adapter Plate C Universal Plate Universal Plate Universal Plate	SANYO®	0737 1137 DB-L10/L20	Universal Plate Universal Plate Universal Plate			
OLYMPUS®		Universal Plate Universal Plate Universal Plate	L. L.	UR-211 UR-421 VM-LC100	Universal Plate Adapter Plate C Universal Plate Base Unit			

All brands are the property of their respective owners.